

# Leisure Accents

**By Confer Plastics**

**36" Spa Step – Model #LASS36**



**74" Spa Step – Model #LASS74**



# Leisure Accents

## 36" and 74" Spa Step

<u>Parts List</u>	<u>36" Step</u>	<u>74" Step</u>
Spa Step Sidewall	2	4
3" Step Support	1	1
5" Step Support	1	1
7" Step Support	1	1
Tread	2	2
Self Adhesive Pads Strip	1	2




Spa Step Sidewall



3" Step Support



5" Step Support

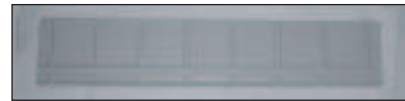

7" Step Support



Plank

Note: For missing or replacement parts, please visit our website at [www.conferplastics.com](http://www.conferplastics.com)  
E-mail: [patioproducts@conferplastics.com](mailto:patioproducts@conferplastics.com)

1. Install 2 self adhesive pads to each Step Sidewall as shown in (Figure 1).



Figure 1

2. Lay the 3" Support on a flat surface with the rectangular slots facing upwards (Figures 2 and 3).


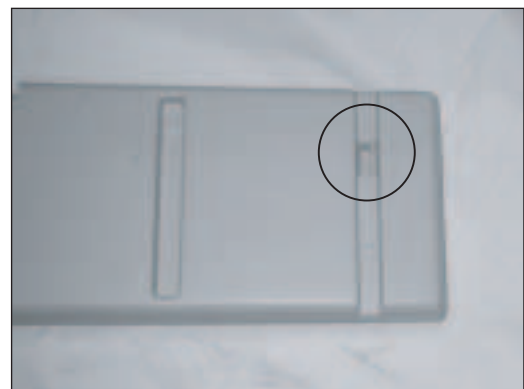


Figure 2

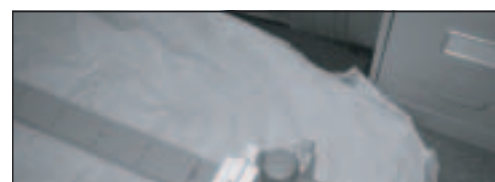

See other side

# Leisure Accents

## 36" and 74" Spa Step



Figure 3

- 3. Insert the locking lug** (near the recessed area in the back of the Sidewall) **into the rectangular slot in the 3" Support**. **Tap the front of the Sidewall with a rubber mallet** (Figure 4) **to lock it into place**. **Take care not to damage the locking lugs on the front of the Sidewall**. **Repeat this process for each Sidewall spacing them evenly according to the application**. **Note: There may be unused slots because each support has multiple applications.**



Figure 4

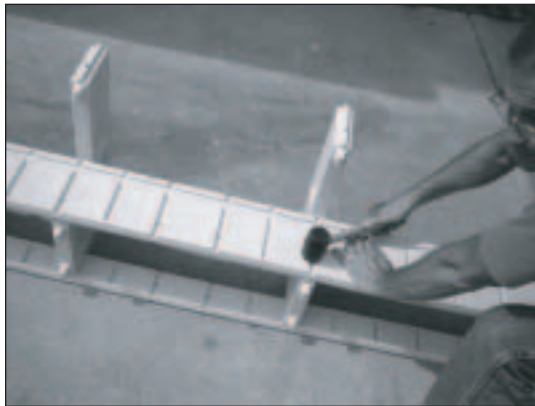


Figure 5

- 4. Lay the 7" Support over the locking lugs on the Sidewall with the groove facing downward** (Figure 5). **Strike the Support with a rubber mallet over each lug location to lock them into place.**



Figure 6

- 5. Lay the 5" Support over the locking lugs on the Sidewall with the groove facing downward** (Figure 6). **Strike the Support with a rubber mallet over each lug location to lock them into place.**

# Leisure Accents

## 36" and 74" Spa Step



Figure 7



Figure 8

6. With the notch facing rearward, angle the bottom Plank into the groove in the 7" Support and position it over the locking lugs (Figure 7). With the step assembly on flat, solid ground, carefully stand on the Plank over the locking lug locations to secure them (Figure 8).

7. Again with the notch in the Plank facing rearward, position the top Plank over the locking lugs. Ensure that the Step assembly is stable and carefully stand on the Plank over the locking lug locations to secure them (Figure 9).



Figure 9

Made in the USA by  
**CONFER PLASTICS, INC.**  
97 WITMER ROAD  
NORTH TONAWANDA, N.Y. 14120-2421  
[www.conferplastics.com](http://www.conferplastics.com)  
e-mail: [patioproducts@conferplastics.com](mailto:patioproducts@conferplastics.com)

PRINTED IN USA  
LASS 12/04